

Canon

EOS REBEL T2i EOS 550D

Quick Reference Guide

This quick reference guide explains the basic function settings and how to shoot and playback images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS REBEL T2i/EOS 550D Instruction Manual.




English


© CANON INC. 2010

CT1-1037-000

 
Quick Start Guide

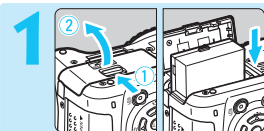


Insert the battery.

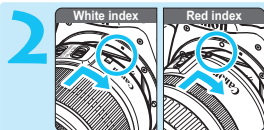 

 
Attach the lens.
Align the lens' white or red index with the camera's index in the matching color.

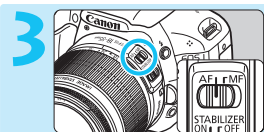


Set the lens focus mode switch to <AF>.

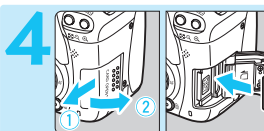


Open the cover and insert a SD card.

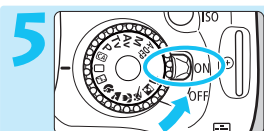

Set the power switch to <ON>.

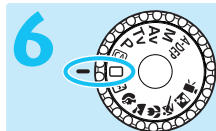

Set the Mode Dial to <Q> (Full Auto).
All the necessary camera settings will be set automatically.

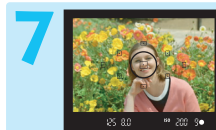

Focus the subject.
Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.



Take the picture.
Press the shutter button completely to take the picture.




View the image.
The captured image will be displayed for approx. 2 sec. on the LCD monitor.

- The ★ on the right of the function indicates that the function is available only in Creative Zone modes (P, Tv, Av, M, A-DEP).
- Battery Life


Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 550 shots	Approx. 440 shots

Image Playback

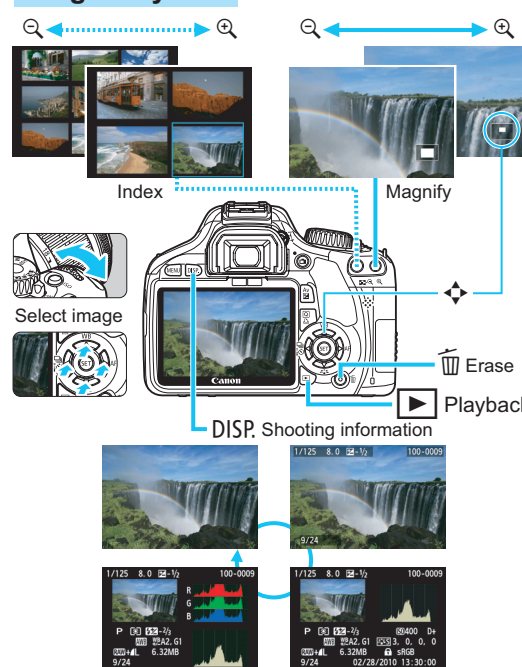


Preparation

Menu Operations

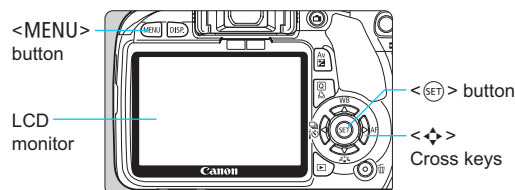

- Press the <MENU> button to display the menu.
- Press the <◀▶> key to select the tab, then press the <▲▼> key to select the desired item.
- Press <SET> to display the setting.
- After setting the item, press <SET>.


 
Basic Zone Modes










Movie Shooting Mode



  
Creative Zone Modes

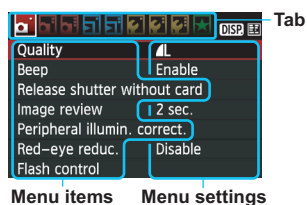

Menu Settings

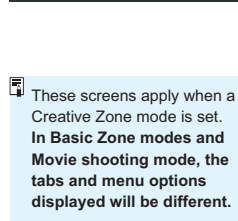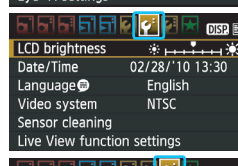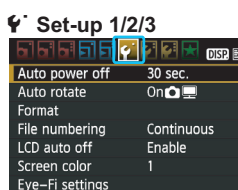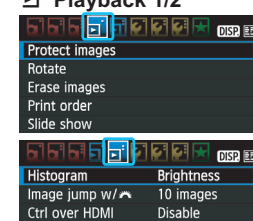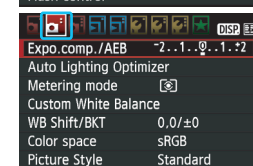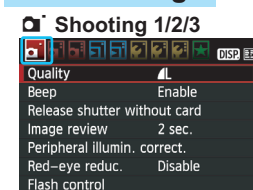       

Movie 1/2

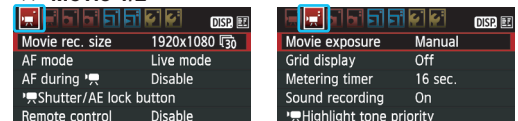 

Quick Control Screen



 
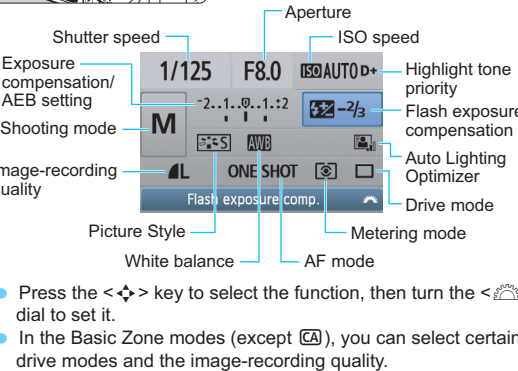 


Image-recording Quality

 - Select [Quality], then press <SET>.
- Press the <◀▶> key to select the quality, then press <SET>.

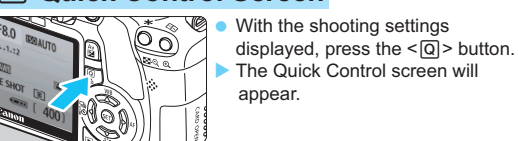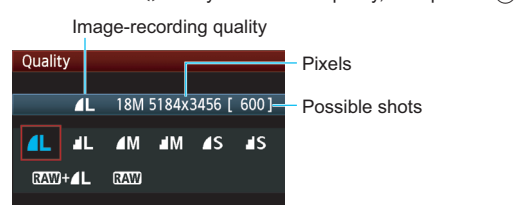


Picture Style

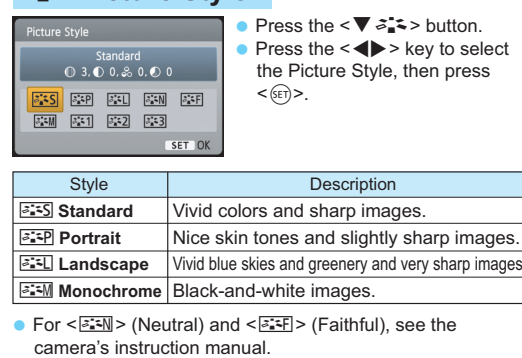 


Shooting Operation

 
Nomenclature

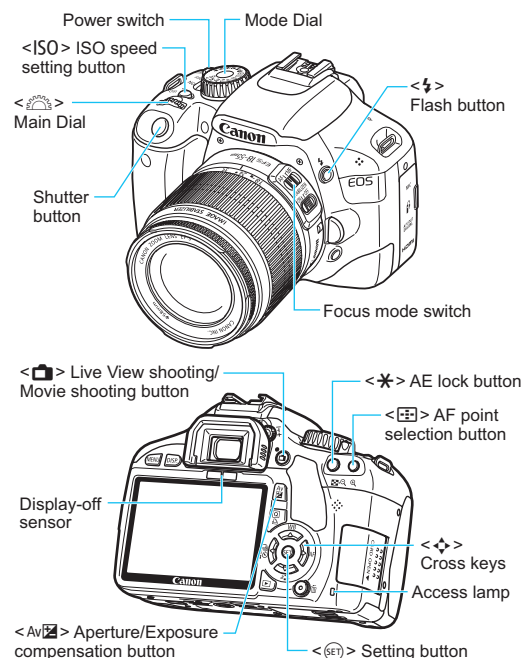


Shooting Settings Display

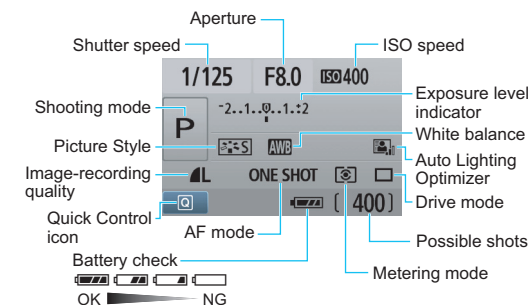 


Viewfinder Information

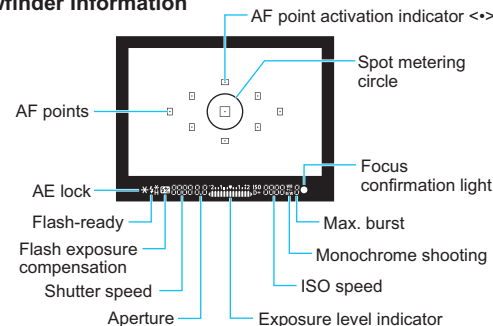 


Basic Zone Modes

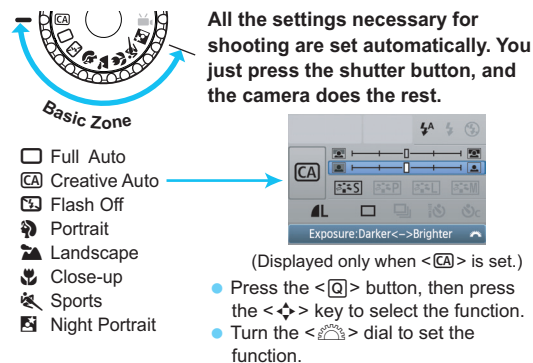 


Using the Built-in Flash

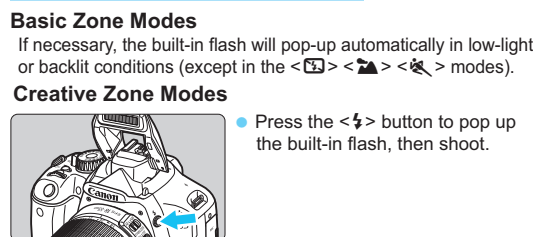 



Creative Zone Modes

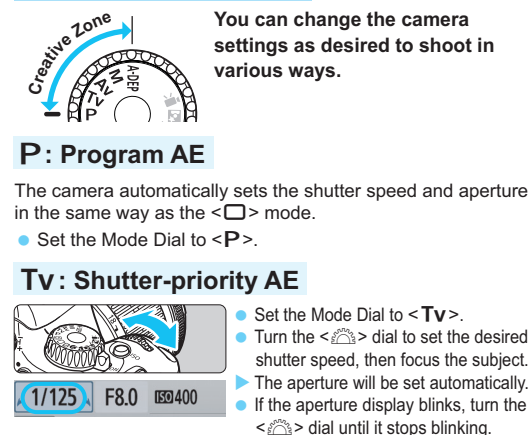 


Aperture-priority AE

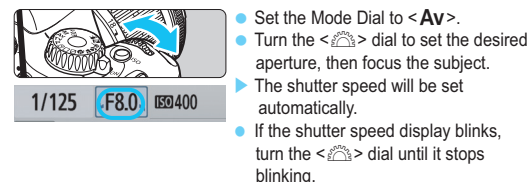 


AF: AF Mode

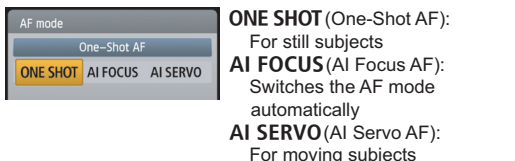  


AF Point

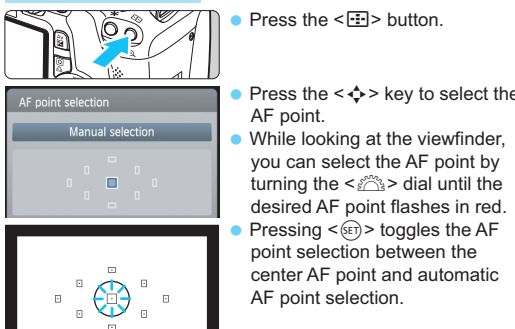 


ISO: ISO Speed

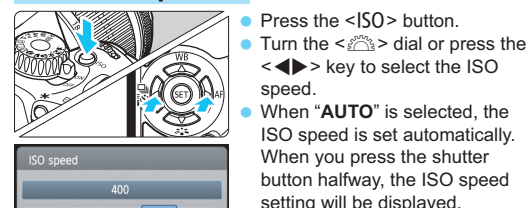 


Drive Mode

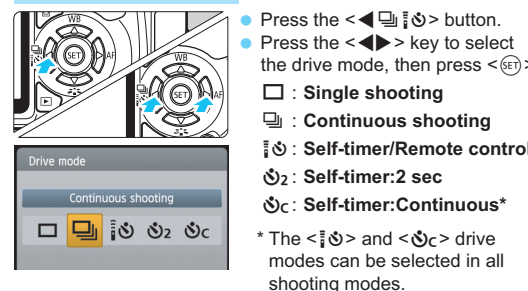 

Live View Shooting

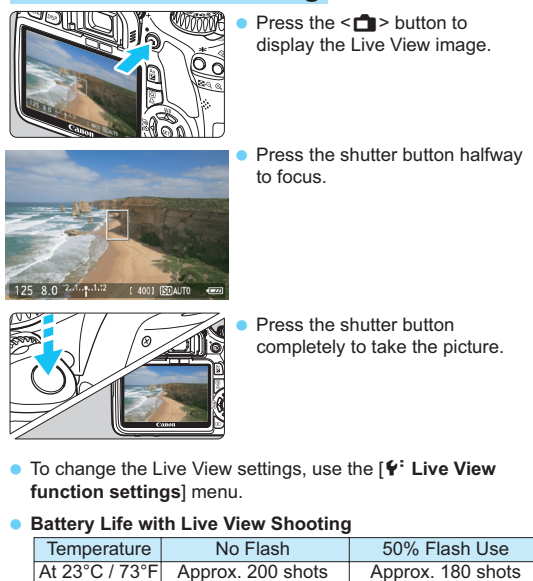 

Shooting Movies

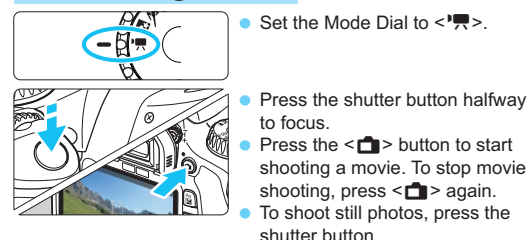 

Custom Functions

1 Exposure level increments	7 AF-assist beam firing
2 ISO expansion	8 Mirror lockup
3 Flash sync. speed in Av mode	9 Shutter/AE lock button
4 Long exposure noise reduction	10 Assign SET button
5 High ISO speed noise reduction	11 LCD display when power ON
6 Highlight tone priority	12 Add image verification data