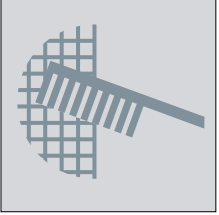
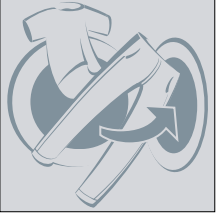
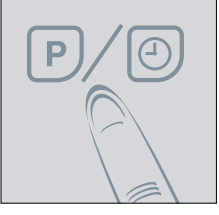
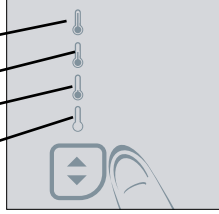
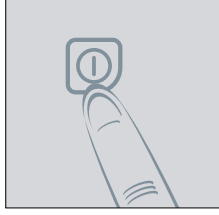
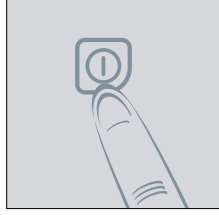
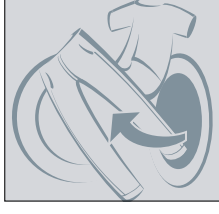


Tumble dryer with manual operation - AHL

<h1>1</h1>	<p>Clean filter</p> 	<p>Fill garments into the drum</p>  <p>Close the door</p>
<h1>2</h1>	<p>Select programme or set the drying time</p> 	<p>P 01 Extra dry P 02 Ready to put away P 03 Ironing dry (15% moisture)</p>
<h1>3</h1>	<p>Select temperature</p> <p>High</p> <p>Medium</p> <p>Low</p> <p>No heat</p> 	
<h1>4</h1>	<p>Press start</p> 	<p>The tumble dryer stops</p> <p>Automatically when the clothes are dry or when the selected time has expired.</p>
<h1>5</h1>	<p>Wait for the dryer to stop or press stop.</p> 	<p>Restart</p> <p>Close the door and press start.</p>
<h1>6</h1>	<p>To prevent creasing: Empty the tumble dryer as soon as the program has ended.</p> 	<p>If the tumble dryer is not emptied immediately after the drying time has ended, an anti-crease programme is automatically engaged. This means that the drum rotates at short intervals, thereby almost completely avoiding creasing.</p>