

W365H **Operating manual**
Washing machine

Exacta

438 9206-71/2A01
05.43

This manual was edited for use by the residents of *P. O. Pedersen Kollegiet*. Irrelevant parts of the original manual were removed.

Contents

IRRELEVANT AND EMPTY PAGES OF THE ORIGINAL MANUAL WERE REMOVED, SO THE PAGE NUMBERS ARE NOT CONTINUOUS.

Contents

General	1:1
Program buttons	1:1
Option buttons	1:2
Start-button	1:3
Lights for program indication	1:3
Detergent container	1:4
Display information	1:5
Error code	1:6
Wash program	2:1
Program 2A01	2:1
Wash program description	2:2
Error codes	3:1
Maintenance	5:1

The manufacturer reserves the right to make changes in design and materials specifications.



Safety



This machine can only be used with water. Never use dry cleaning agents.

Do not allow children to operate the machine.

Do not hose down or spray the machine with water.

All mechanical and electrical installation must be carried out by qualified personnel.

Do not bypass the door locking device.

Should the machine malfunction, please report the fault to the technician responsible for the machine.

Program buttons

Fig. Normal wash program, max 95°C.

①

Fig. Normal wash program, max 60°C.

②

Fig. Normal wash program, max 40°C.

③

Fig. Permanent Press wash program, max 60°C.

④

Half load.

Fig. Permanent Press wash program, max 40°C.

⑤

Half load.

Fig. Delicate wash program with gentle action,

⑥

max 30°C.

Half load.

Fig. Hand wash program with very gentle action,

⑦

max 30°C.








Half load.

Fig. Only extraction program.

⑧

Fig. Regarding program, see instruction sign.

⑨

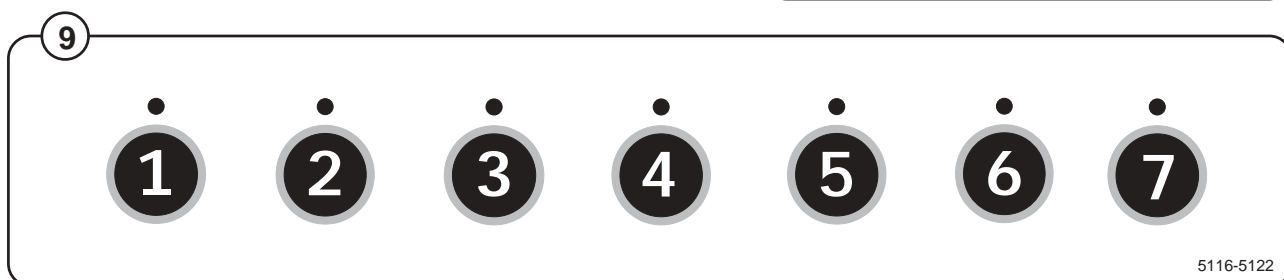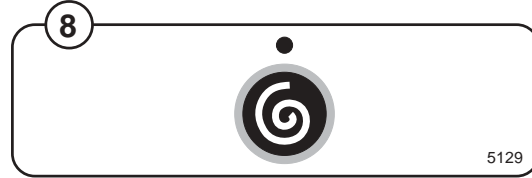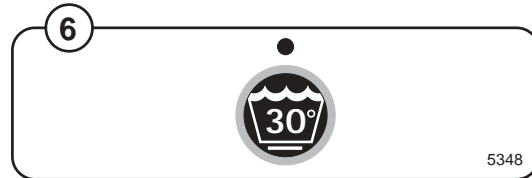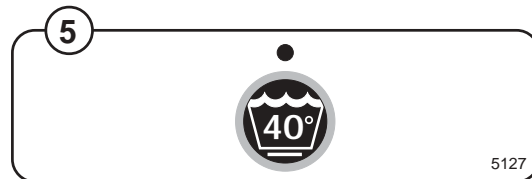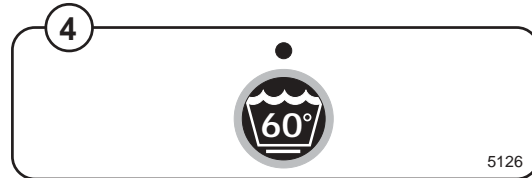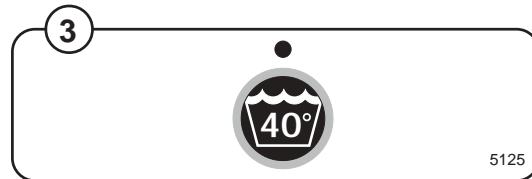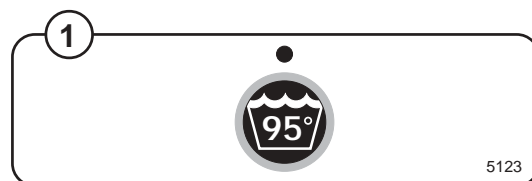


Option buttons

"Express"

Fig. Decreases the temp. and shorter time in prewash and main wash.


10

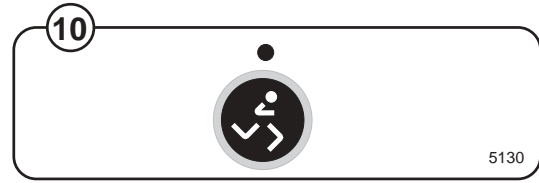

"Heavy Soiled"

Fig. Normally gives a prewash, longer wash time and more water in the rinses. Can be used together with Normal and Permanent Press programs.


11

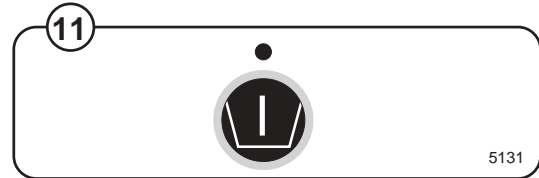

"Gentle Extraction"

Fig. Ensures gentle extraction in all programs. There will be no intermediate extraction, only 20 seconds extraction in the end of the program.

12

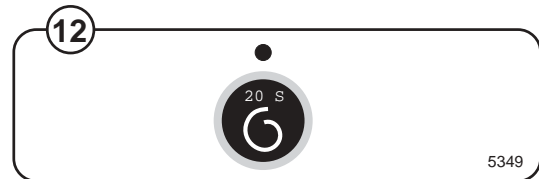

"Extra Rinse"

Fig. Gives an extra rinse in all programs. Not shown on the program indication.

13


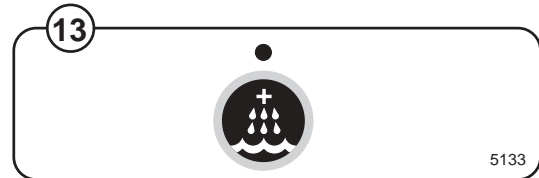



Fig. Regarding function, see instruction sign and program description.

16

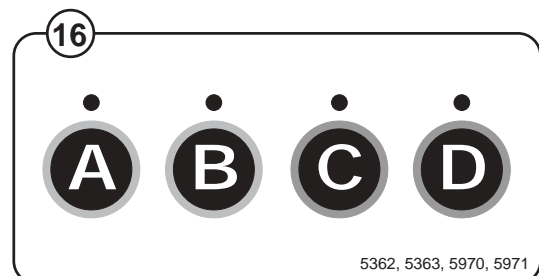


Start-button

- Fig. 17**
- **START:**
Press button to start a program.
 - **RAPID ADVANCE:**
To get Rapid Advance function, keep the button pressed as long as requested.
 - **PAUSE:**
Press shortly on the start-button to get a pause function.

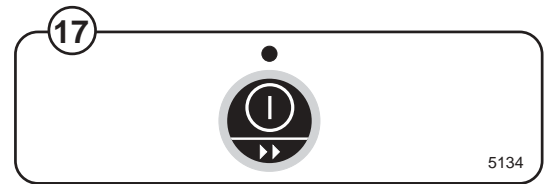


Lights for program indication

- Fig. 18**
- When a program is selected, the lights are lit and shows what is included in the program selected. When the program is started only the light in the program sequence is lit. As the program continues the lights are lit.

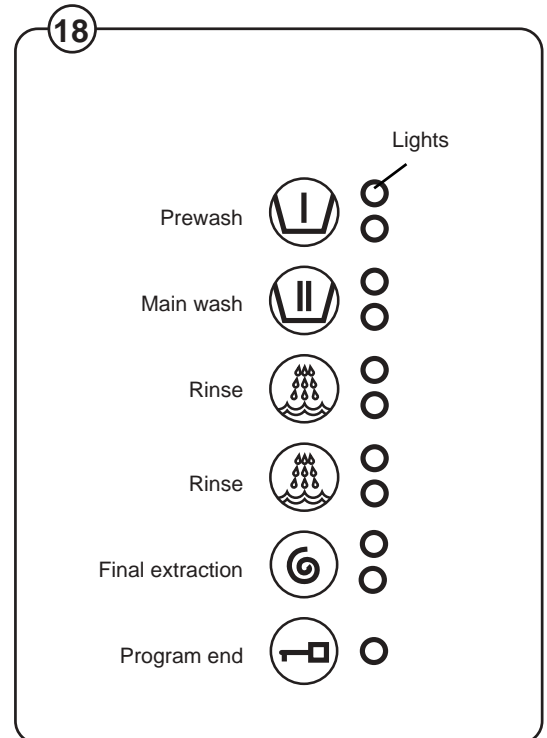

Detergent container

- Fig.** 19
- Compartment 1 – Pre wash, powder or liquid detergent
- Compartment 2 – Main wash, powder detergent
- Compartment 3 – Softener
- Compartment 4 – Main wash, liquid detergent

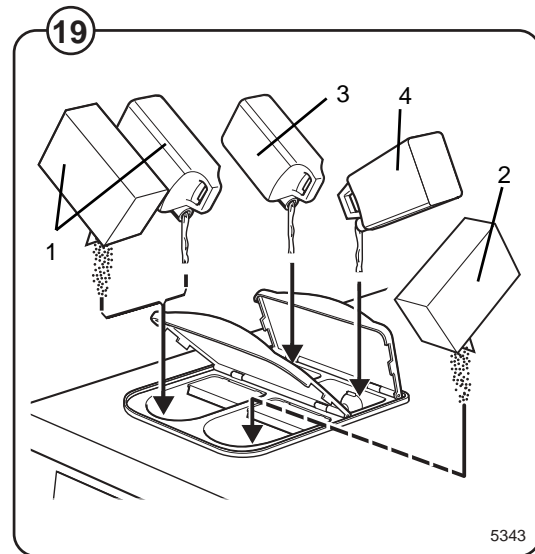

Display information

- Fig. 20**
- The clock symbol and two figures are now lit in the display. The two figures show the time remaining until the end of the wash.





The two time figures are not displayed immediately after installation. The relevant program has to have been used at least once before the remaining time is displayed.

- Fig. 21**
- Immediately after starting, the colon ":" flashes in the display. This means that as long as it is flashing, a new program can be selected (without losing anything). You still have the opportunity to change your mind if you have chosen the wrong program.

- Press **PAUSE/START**.
- Select new program

- Press **START** again once the new program has been selected.


- Fig. 22**
- If you would like to see the temperature of the water while the program is running, hold down one of the program selection buttons. (Only applies in certain countries.)
 - The temperature now appears in the display.

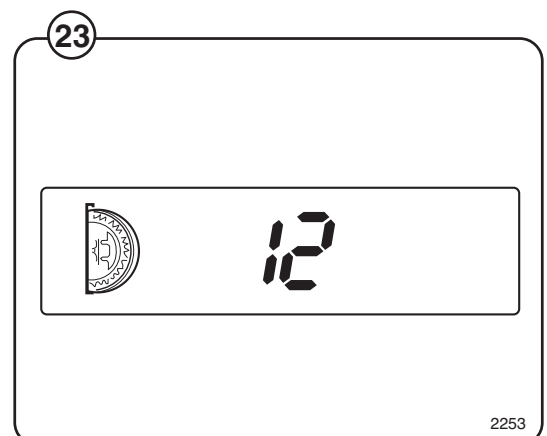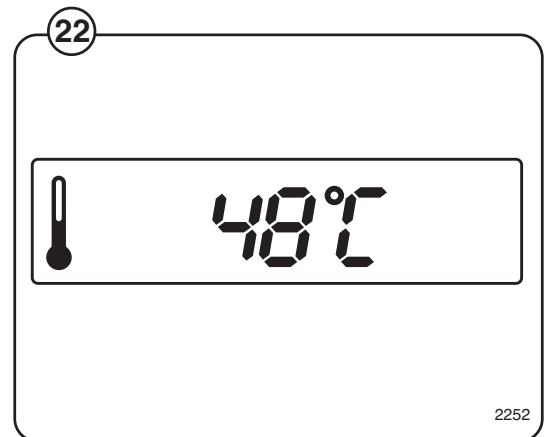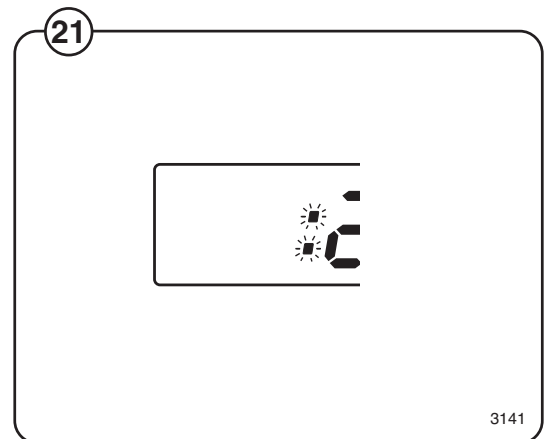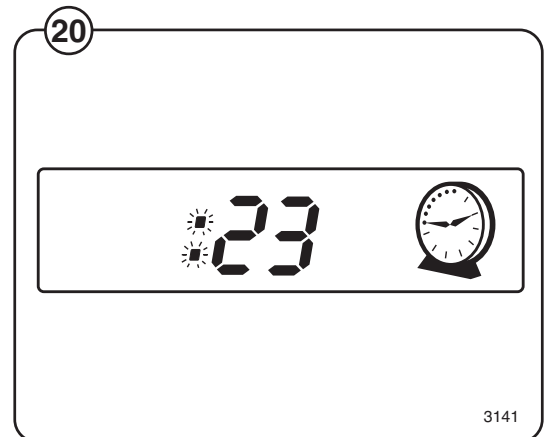

Error code

Fig. Error code can be shown in the display. For further information, see separate chapter.


24

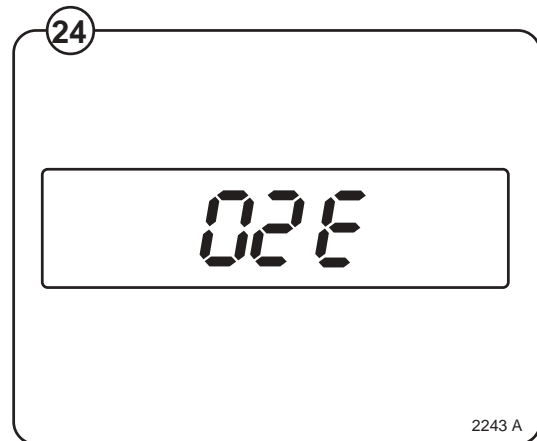

Program 2A01

Fig. 1 Program idea: These programs are designed for normal household textiles. They are used in apartment house laundries. You can wash everything from cotton sheets and terry towels to textiles labeled with hand wash symbol. You have the possibility to choose different options such as prewash, express program, short extraction and extra rinse.

- Press the button for the program required.
- Press the button(s) for any option required.
- Add correct amount of detergent(s) and fabric softener as indicated in program table.
- Press START-button. (Some programs will start with a short extraction for weight measuring).

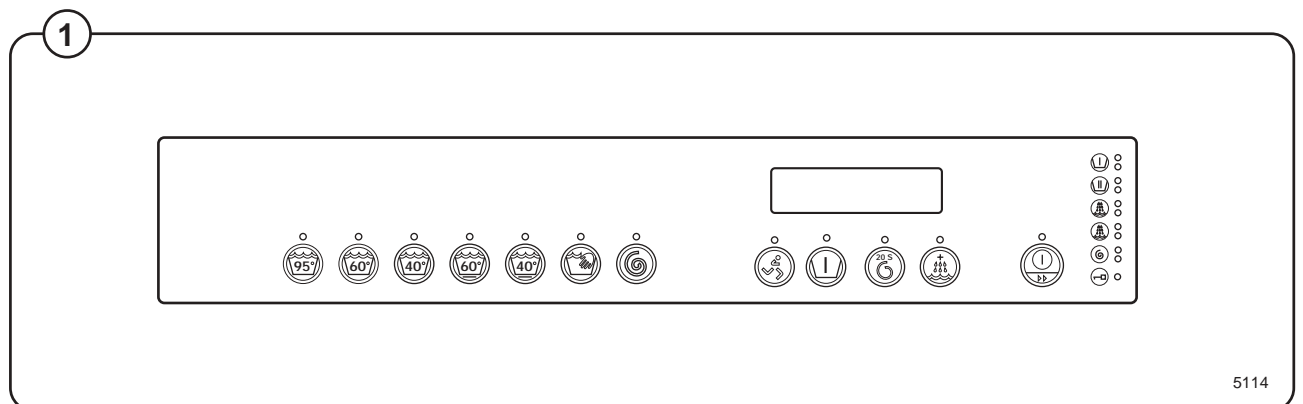




















 












5114

Wash program

Wash program description

2A01 Apartment House Laundry

























	Prewash	Main wash	Rinses	Final extraction	Detergent compartment No.
	–	80°C	4	4-6 min	3, 2 or 4
 	cold	85°C	4	4-6 min	1, 3, 2 or 4
 	–	80°C	4	20 sec	3, 2 or 4
  	cold	85°C	4	20 sec	1, 3, 2 or 4
	–	55°C	4	4-6 min	3, 2 or 4
 	cold	60°C	4	4-6 min	1, 3, 2 or 4
 	–	55°C	4	20 sec	3, 2 or 4
  	cold	60°C	4	20 sec	1, 3, 2 or 4
	–	40°C	4	4-6 min	3, 2 or 4
 	cold	40°C	4	4-6 min	1, 3, 2 or 4
 	–	40°C	4	20 sec	3, 2 or 4
  	cold	40°C	4	20 sec	1, 3, 2 or 4
	–	55°C	3	1-3	3, 2 or 4
 	cold	60°C	3	1-3 min	1, 3, 2 or 4
 	–	55°C	3	20 sec	3, 2 or 4
  	cold	60°C	3	20 sec	1, 3, 2 or 4

Wash program

2:3

Wash program description

2A01 Apartment House Laundry



	Prewash	Main wash	Rinses	Final extraction	Detergent compartment No.
	–	40°C	3	1-3 min	3, 2 or 4
 	cold	40°C	3	1-3 min	1, 3, 2 or 4
 	–	40°C	3	20 sec	3, 2 or 4
  	cold	40°C	3	20 sec	1, 3, 2 or 4
	–	30°C	2	20 sec	3, 2 or 4
 	–	40°C	2	1-3 min	3, 2 or 4
 	–	30°C	2	20 sec	3, 2 or 4
  	–	40°C	2	20 sec	3, 2 or 4
	–	–	–	3 min	–
 	–	–	–	4-6 min	–
  	–	–	–	2 min	–
 	–	–	–	20 sec	–

Wash program

For all programs

Fig. 2 "Express" decreases the temp. 10°C in all programs and shortens main wash time by four minutes in normal and permanent press programs.

Fig. 3 Gives an extra rinse in all programs except extraction programs.

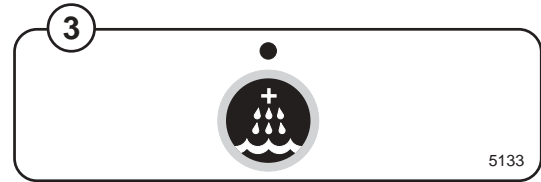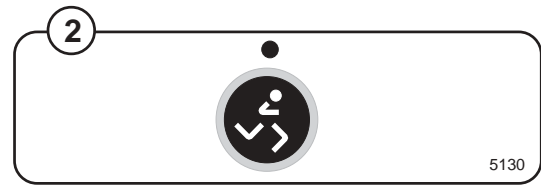


Error codes

If the power supply to the machine should be cut while it is working, the programmer has a memory which stores the program at least one minute.

Fig. 1 The machine will restart automatically once the power supply is restored.

When error code occur a new start attempt can be made directly by activate the START-button. Resetting the wash program and error code, in order to choose a new wash program, can be done by pressing the START-button min. 10 seconds.

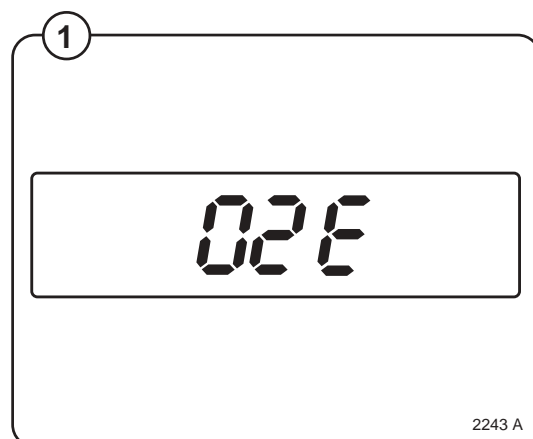

Error code	Cause/Action
01E	Acknowledgement signal for water level not received within time allowed.
02E	Door status acknowledgement signal not received during program operation.
03E	Door lock acknowledgement signal not received within time allowed.
04E	Temperature sensing device indicates temperature below -5°C (continuity fault).
05E	Temperature sensing indicates temperature above 98°C (short-circuit).
06E	Water level above parameter set, on program start-up.
07E	Water level above parameter set for safety, during program.
08E	Increase in water temperature is below parameter set.
10E	Water level is above parameter set (10 scale units) after water discharge.
12E	The program control unit cannot read the program EPROM.
13E	The program control unit receives no response from the motor control unit.
14E	Water level system not calibrated.

Fault codes

Error code	Cause/Action
17E	Door status acknowledgement signal not received, although door lock acknowledgement signal has been received.
18E	Only with CALCAD 4400. Start not allowed because full payment has not been made for that program, or the booking time is too short to allow completion of the wash program selected.
19E	Communications between the CALCAD 4400 and the program control unit board interrupted.
21E	The electronic timer wrongly configured.
22E	The automatic calibration system for water level is not working.
31E	Temperature of motor control unit heat sink too high.
32E	Thermal protection for motor has cut out.
33E	The motor control unit has received a start command from the program control unit without having the interlock signal. No fault in motor control unit interlock hardware.
35E	Motor control unit indicating short-circuit between motor winding outputs.
36E	Motor control unit indicating fault/error in receiving circuitry for lock acknowledgement signal.
37E	Motor control unit indicating DC voltage level too low.
38E	Motor control unit indicating DC voltage level too high.
41E	The motor control indicates faults in the circuits for the motor's overheating protection.
43E	The RDC card indicates that imbalance switches are activated when the motor is not turning.
45E	The RDC card indicates that tacho pulses are absent at the requested motor speed.



www.electrolux.com/professional

Share more of our thinking at www.electrolux.com